

SERVICE REMINDERS

2023 ZR-V e:HEV

A	Replace engine oil and oil filter	0.4
B	Inspect front and rear brakes	
	Inspect tie-rod ends, steering gearbox and boots	
	Inspect suspension components	
	Inspect driveshaft boots	
	Inspect brake hoses and lines including ABS lines	
	Inspect all fluid levels and condition of fluids	
	Inspect exhaust system	
	Inspect fuel lines and connections	0.6
	Inspect tyre condition	
	Check expiry date for TRK (Temporary Repair Kit) bottle	
	Test Drive (noise, stability, dashboard operation)	
	Check lights alignment	
	Inspect vehicle corrosion *1	
	Check parking brake adjust	
	Inspect drive belt	
2	Replace dust and pollen filter *2	0.1
3	Replace transmission fluid	0.4
4	Replace fuel filter *3	1.4
5	Replace engine coolant	0.8
7	Replace brake fluid	0.4
8	Replace air cleaner element *4	0.2
9	Replace spark plugs	0.4

* 1 If item B appears before one year has passed, inspect for vehicle corrosion every year.

* 2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year.

* 3 It is recommended that you replace the fuel filter every 130,000km (81,000 miles) if the fuel you are using is suspected to be contaminated with dust, etc. because the filter can become clogged sooner.

* 4 If you drive in dusty conditions, replace every 30,000 km (18750 miles).