

SERVICE REMINDERS

2023 Civic e:HEV

Service Type	Maintenance Items	
A	Replace engine oil and oil filter	0.5
B	Inspect front and rear brakes Inspect tie-rod ends, steering gearbox and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines including ABS/VSA lines Inspect all fluid levels and condition of fluids Inspect exhaust system Inspect fuel lines and connections Check expiration date for TRK (Temporary Repair Kit) bottle Test Drive (noise, stability, dashboard operation) Check lights alignment Inspect vehicle corrosion *1 Check parking brake adjust Inspect tyre condition Inspect drive belt Replace transmission fluid	0.6
2	Replace dust and pollen filter *2	0.2
3	Replace fuel filter *3	0.4
4	Inspect idle speed (Petrol models only)	1.6
5	Replace engine coolant Replace rear differential fluid (E-DPS)	0.6
7	Replace brake fluid	0.4
8	Replace air cleaner element *4	0.2
9	Replace spark plugs *5 Inspect valve clearance	0.4

Under the following conditions, maintenance for certain items is required independent of the multi information display.

* 1 If item B appears before one year has passed, inspect for vehicle corrosion every year.

* 2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year.

* 3 It is recommended that you replace the fuel filter every 130,000 km (81,000 miles) if the fuel you are using is suspected to be contaminated with dust, etc because the filter may be clogged sooner.

* 4 If you drive in dusty conditions, replace every 30,000 km (18,750 miles).

* 5 More than 50% of driving time above 160km/h, replace the spark plugs every 100,000km (62,500 miles)